



# ***RED BUTTON***

***INSTRUCTIONS MANUAL***  
***MANUAL DE INSTRUCCIONES***

# RED BUTTON

The RED BUTTON is a push button designed to activate special effects machines that require electric current to operate.

## TECHNICAL SPECIFICATIONS

REF: TC-115

Size: 13,8 x 17,4 x 14,8 cm


Weight: 1,6Kg

Power: 100-230 V AC 50/60Hz

Max supported load: 16A resistive load  
15A inductive load

## PARTS

1. Power input (Powercon)
2. Power input LED
3. Power output (Powercon)
4. Power switch
5. Push button
6. Overload protection

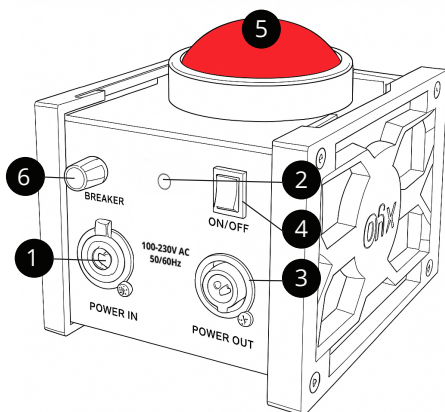

## SET UP

1. Place the RED BUTTON on a stable surface. Connect the power cable to the Powercon input connector (1). Make sure the power cable supports the wattage of the FX machine(s) you want to operate.
2. Make sure the power switch (4) is set to OFF (0).
3. Connect the FX device(s) to the power out connector (3). If there is incoming power, the Power LED (2) will light up.

## OPERATION

1. Turn on the RED BUTTON using the power switch (4) — switch to ON (I). The push button (5) will light up, indicating that the RED BUTTON is ready to activate the connected FX device.
2. Trigger the effect by pressing the illuminated push button (5).

## DISCONNECTING

1. Switch OFF the RED BUTTON using the power switch (4).
2. Disconnect all cables and devices.

## CAUTION

Oh!FX is not responsible for accidents or damage resulting from: 1. Failure to follow the warnings or instructions for this device. 2. Use for purposes not explicitly stated in this manual. 3. Unauthorized modifications or tampering. Poor maintenance. 4. Misuse of the device. Oh!FX is not liable for any consequential loss in case of device failure.

**DANGER:** if you detect any malfunction in the device, contact your distributor. Any repairs must be carried out by a technician authorized by Oh!FX.

**WARRANTY:** this device is covered by a 2-year warranty against manufacturing defects. The warranty is void if: The device has been used for purposes not described in this manual. The device has been manipulated. The failure is due to misuse.

## RED BUTTON

El RED BUTTON es un pulsador destinado a activar máquinas de efectos que requieran corriente eléctrica para accionarse.

### ESPECIFICACIONES TÉCNICAS

REF: TC-115

Dimensiones: 13,8 x 17,4 x 14,8 cm


Peso: 1,6 Kg

Alimentación: 100-230 V AC 50/60Hz

Carga máxima admitida: 16A de carga resistiva  
15A de carga inductiva

### PARTES

1. Entrada de corriente (powercon)
2. Led entrada de corriente
3. Salida de corriente (powercon)
4. Interruptor
5. Pulsador
6. Protector de sobrecarga

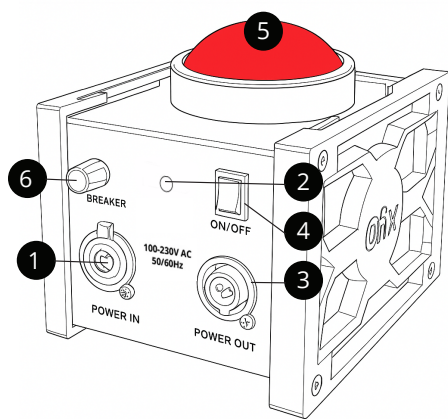

### MONTAJE

1. Coloque el RED BUTTON en una superficie estable. Conecte la alimentación de corriente mediante el conector powercon de entrada (1). Asegúrese de que el cable de alimentación admite la potencia de la/s máquina/s de FX que quiere controlar.

2. Asegúrese de que el interruptor (4) esté en posición de apagado "0".

3. Conecte el/los dispositivo/s a controlar a la toma de salida de corriente "power out" (3). Si hay presencia de corriente eléctrica el led de entrada de corriente (2) estará encendido.

### OPERATIVA

1. Encienda el RED BUTTON mediante el interruptor (4) (posición ON). En ese momento el pulsador (5) se iluminará indicando que el RED BUTTON está listo para accionar el dispositivo que tenga conectado.

2. Utilice el pulsador (5) para accionar el dispositivo.

### DESMONTAJE

1. Apague el RED BUTTON mediante el interruptor (4) (posición OFF).

2. Puede proceder a retirar todas las conexiones.

### PRECAUCIONES

Oh!FX no se responsabilizará por accidentes y daños que sean resultado de: 1. Incumplimiento de las advertencias o instrucciones establecidas para este dispositivo. 2. Uso para otros fines que no estén expresamente indicados en estas instrucciones. 3. Manipulaciones no autorizadas de este dispositivo. 4. Mantenimiento insuficiente. 5. Uso indebido del dispositivo. Oh!FX no se responsabilizará de ninguna pérdida consecuencial en caso de una avería de este dispositivo.

**PELIGRO:** si detecta una avería en este dispositivo póngase en contacto con su distribuidor. Cualquier avería debe ser reparada por un técnico autorizado por Oh!FX.

**GARANTIA:** este dispositivo dispone de garantía de 2 años contra defectos de fabricación. La garantía no será válida si: el dispositivo se ha utilizado para fines no descritos en este manual, si el dispositivo ha sido manipulado, a causa de un uso indebido.



*[www.ohfx.eu](http://www.ohfx.eu)*

